


1. How to unlock the handle


For the embosser's protection, the handle is locked when shipped. Slide the lock back with holding the handle down.

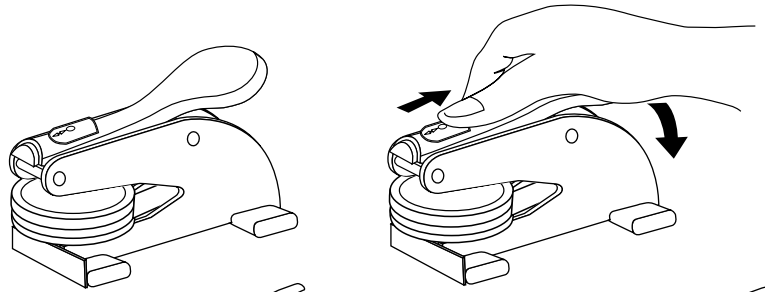

2. How to change the insert die



To remove the insert die:

First, hold the top and bottom parts of the insert die together and gently pull it out from the embosser.

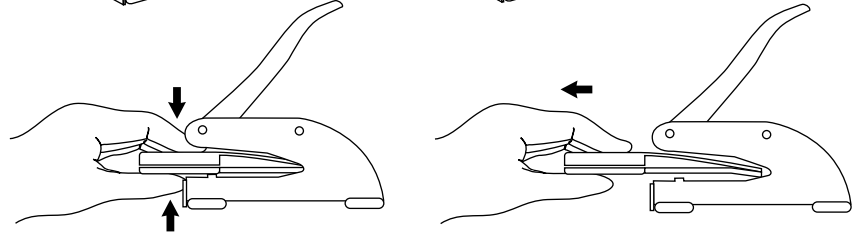


To install the insert die:

Hold the top and bottom parts of the insert die together and gently insert it to the embosser. Make sure to lock into the bottom side of the insert. (The locking position is shown below)

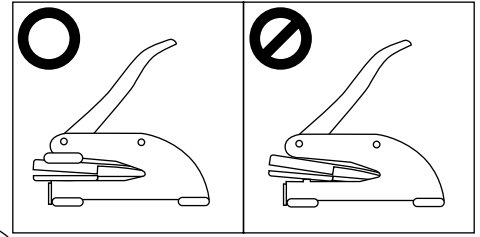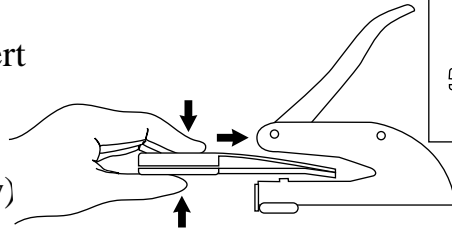


Locking Position

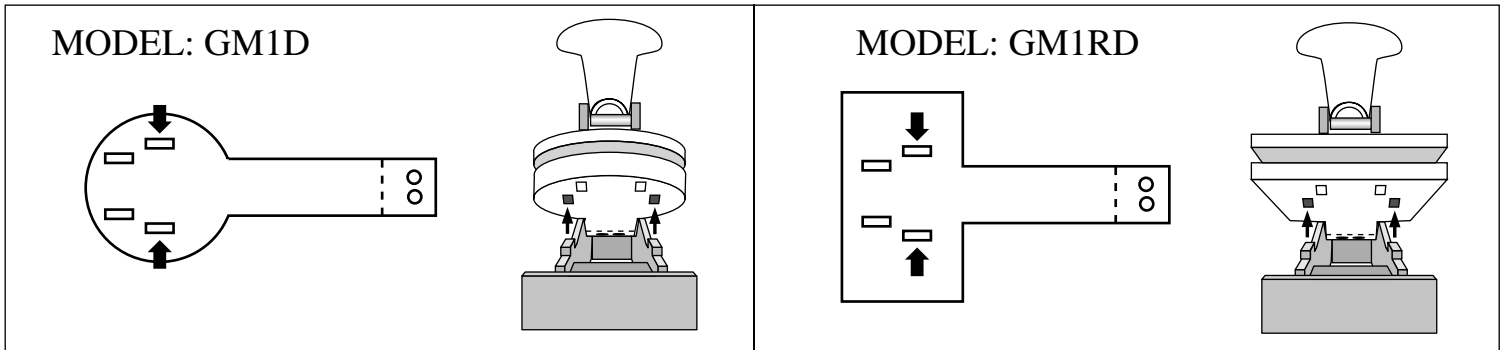

3. Making impressions

Before making the impression, make sure the direction is correct. then press the handle gently. You may want to practice with scrap paper first. The pressure needs to be controlled by the thickness of paper. 24lb paper is recommended.

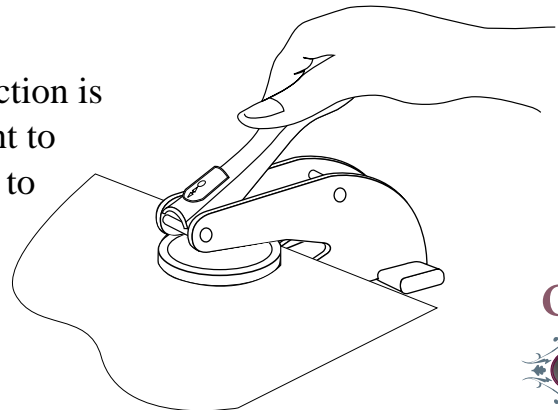

Enjoy Embossing!

You can order additional plates at: www.livingvictorian.com